

# GL-SERIES 4G GPS TRACKER



MODEL# GL320/GL310/GL300

# **USER GUIDE**

Visit: www.SecuLife.us





	CHAPTER 1	3
	QUICK SETUP GUIDE	4
READ ME	GETTING STARTED	5
	CHAPTER 2	10
READ ME		
	WHAT DO THE LED LIGHTS MEAN ?	11
	CHARGING	
	SOS BUTTON	13
	CHAPTER 3:	14
	MAP PAGE	15
	NOTIFICATIONS	16
	MY DEVICES	17
	DEVICE DETAILS	
	CREATE A GEO FENCE	
READ ME	LOCATION HISTORY	
	MAIN CONTACT NUMBER	
	SMS ALERT SWITCH	
	SET SOS NUMBER	23
	QUESTIONS	
	SAFETY INFORMATION/WARNING/CAUTION	25



AN OVERVIEW ON THE QUICK INITIAL SETUP GUIDE

KEEP THE THINGS YOU CARE ABOUT SECURE BOTH AT HOME AND ON THE GO.



ACTIVATE YOUR SERVICE PLAN ONLINE
RECEIVE A NEW PHONE NUMBER FOR
YOUR GPS TRACKER

TURN ON THE GPS TRACKER
WITH A SIMPLE PRESS OF A BUTTON

TO REMOTELY MONITOR YOUR LOVED ONE OR YOUR ASSETS. ANYTIME. ANYWHERE!

CREATE NEW USERNAME AND PASSWORD
THEN LOGIN TO OUR APP!

5 UPDATE DEVICE SETTING ON MOBILE APP
SET THE CORRECT INFO OF THE DEVICE
HOLDER AND THE APP USER

SecuLife® GL Series 4 www.SecuLife.us



# ACTIVATE YOUR SERVICE PLAN ONLINE

YOUR SECULIFE® CL SERIES (GL320/GL310/GL300) GPS TRACKER COMES WITH A PREINSTALLED SIM CARD: THE SIM CARD NUMBER IS LOCATED ON THE BOX. ACTIVATE THE SERVICE PLAN ON YOUR SIM ONLINE AND RECEIVE A NEW PHONE NUMBER ASSOCIATED WITH THE TRACKER.



### **VISIT: WWW.ACTIVATE.SECULIFE.US**

WE WILL REGISTER YOUR EMAIL ADDRESS AND LINK THE DEVICE TO OUR SECULIFE® MOBILE APP WHEN ACTIVATING YOUR DEVICE SIM CARD, SO YOU DON'T HAVE TO MANUALLY REGISTER TO THE APP. YOU'LL RECEIVE AN EMAIL CONFIRMATION WITH THE NEW NUMBER FOR YOUR RECORDS AND TO BE USED TO UPDATE YOUR MOBILE APP DEVICE INFO ON THE FOLLOWING STEPS.



PRESS AND HOLD THE POWER KEY AT LEAST 3 SECONDS AND RELEASE IT TO TURN ON THE DEVICE. AT THE SAME TIME, PWR LED WILL LIGHT ON



IF THE TRACKER DOESN'T TURN ON, IT LIKELY NEEDS TO BE CHARGED. CHARGE THE TRACKER FOR SEVERAL HOURS AND THEN TRY AGAIN.

TO AVOID TAMPERING WITH THIS DEVICE, THE ABILITY TO TURN OF THE DEVICE HAS BEEN DISABLED. TO ENABLE IT PLEASE CONTACT OUR SUPPORT TEAM

SecuLife® GL Series 6 www.SecuLife.us



3

# DOWNLOAD THE MOBILE APP

TO DOWNLOAD, SCAN THE QR CODE BELOW FROM YOUR CELLPHONE:



SECULIFE



Scan QR Code



Scan QR Code or Android Device



www.Seculife.us/ios



www.Seculife.us/android

OUR MOBILE APP IS ALSO AVAILABLE ON APPLE APP STORE OR GOOGLE PLAY STORE. SEARCH "SECULIFE" TO FIND THE APP.




Л

# REGISTER AND LOGIN TO THE MOBILE APP

A FAMILY MEMBER OR THE CAREGIVER CAN OPEN THE MOBILE APP AND LOGIN TO THEIR ACCOUNT WITH A USERNAME AND PASSWORD THAT WAS CREATED DURING THE SIM CARD ACTIVATION PROCESS ONLINE.

- ENTER YOUR EMAIL ADDRESS AS USERNAME.
- · ENTER YOUR PASSWORD.

20000

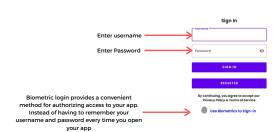

SecuLife® GL Series 8 www.SecuLife.us



UPDATE

# UPDATE THE **DEVICE INFO ON** YOUR MOBILE APP

WHEN YOU FIRST ACTIVATE YOUR TRACKER'S SIM CARD ONLINE THE DEVICE WILL BE ADDED INTO YOUR MOBILE APP ACCOUNT AUTOMATICALLY, YOU CAN ACTIVATE MULTIPLE DEVICES ONLINE. MAKE SURE YOU USE THE SAME EMAIL ADDRESS OF YOUR MOBILE APP IN ORDER ADD THE DEVICE UNDER YOUR MOBILE APP LOGIN ACCOUNT.

- 1. TAP ON YOUR DEVICE TO GO TO THE DEVICE DETAILS TO SET/UPDATE ITS SETTINGS.
- 2. SET MAIN CONTACT NUMBER: THE PERSON'S (ADMIN'S) PHONE NUMBER TO RECEIVE APP ALERTS
- 3. SET SOS NUMBER: LIST OF PHONE NUMBERS TO RECEIVE NOTIFICATION ALERTS WHEN THE SOS BUTTON IS TRIGGERED



Click "Mv Devices"

information.



DETAILED INFO OF THESE STEPS CAN BE FOUND IN CHAPTER 3 OF THIS MANUAL.



# MEET YOUR SECULIFE® GL SERIES GPS TRACKER

WITH A USER-FRIENDLY PANIC BUTTON FOR PERSONAL SAFETY MANAGEMENT AND ASSET MONITORING APPLICATIONS

# MEET YOUR DEVICE GL-SERIES GPS TRACKER



GL-SERIES: GL300/GL310/GL320

### WHAT DO THE LED LIGHTS MEAN?

LED	Device Status	LED Status
	Searching for network	Fast flash
CE	The device has been registered to network.	Slow flash
	Power off	Dark
- GPS	GPS has fixed a position.	Solid
	GPS is in the process of fixing.	Fast flash
	GPS is on and GPS data is wrong.	Slow flash
	GPS is off.	Dark
	Power on and normal	Dark
	Charger inserted and charging completed	Solid
	R Charger inserted and charging	Fast flash
	Power key is pressed to power off the device.	Fast flash
	Abnormal	Fast flash
	Power low alert	Slow flash



CHARGING

# FIRST TIME CHARGE

WE RECOMMEND FULLY CHARGING THE GL300/GL310/GL320 GPS TRACKER FOR AT LEAST 6-HOURS BEFORE USING IT FOR THE FIRST TIME. IN THE MEANTIME, YOU CAN ACTIVATE THE SIM CARD THAT COMES WITH THE GPS TRACKER IF YOU HAVEN'T DONE IT YET.

### CHARGE YOUR DEVICE

CONNECT THE USB TYPE-C CABLE TO THE INTERFACE CHARGING PORT LOCATED ON THE SIDE OF THE GPS TRACKER AND LET IT CHARGE FOR AT LEAST 6-7 HOURS.



CUSTOMERS ARE SOLELY RESPONSIBLE FOR PROPER CHARCING, USAGE, MAINTENANCE AND PERIODIC INSPECTION OF BATTERIES TO RESURE SAFFLY AND PROPER WORKING ORDER, CUSTOME UNDERSTANDS AND ASSUMES ALL RISK ASSOCIATED WITH U-POLYMER OR U-TON BATTERIES AND SECULIFE SHALL HAVE NO LIABILITY WITH RECARD TO THE FUNCTIONALITY OR SAFFLY OF ANY SUCH BATTERIES.



## **SOS BUTTON**

SOS WILL IMMEDIATELY NOTIFY THE EMERGENCY CONTACT LIST AND SEND AN SMS ALERT AND IN-APP ALERT.

TO ACTIVATE THE SOS ON THE DEVICE, HIT THE SOS BUTTON FOR 5 SECONDS.

UPON TRIGGERING THE SOS BUTTON BY THE DEVICE HOLDER, THE MOBILE APP WILL RECEIVE AN IMMEDIATE NOTIFICATION OF THE DEVICE HOLDER'S LOCATION AND ITS SOS STATUS. UPON RECEIVING AN SOS ALERT, YOU CAN IMMEDIATELY SEE HIS/HER LOCATION ON THE MAP SO YOU CAN TAKE THE PROPER ACTION, IF NEEDED.

### Press and Hold for 5 seconds

Sends SOS alert to the emergency contacts





A NEW, NEXT-LEVEL, AND EASY WAY TO PROTECT AND CONNECT WITH YOUR LOVED ONE. ANYTIME, ANYWHERE!



### **MAP PAGE**

MOBILE APP HOME SCREEN WILL DISPLAY THE MAP AND THE DEVICE(S) LAST SEEN LOCATION ON THE MAP. MOBILE APP ALSO HAVE OTHER FUNCTIONS AVAILABLE (ADD FENCES, NOTIFICATIONS, MY DEVICES) ON THE FUNCTION BAR TO TRACK, LOCATE AND SETUP THE SECULIFE® GL SERIES AT YOUR CONVENIENT.





## **NOTIFICATIONS**

SEE ALL THE NOTIFICATION RECEIVED FROM YOUR DEVICE

SEE THE ALERT TYPE AND THE DEVICE NAME WITH THE DATE & TIME OF THE ALERT.

IF YOU HAVE MULTIPLE DEVICES ADDED TO YOUR MOBILE APP, YOU WILL SEE ALL THE NOTIFICATIONS FOR ALL OF YOUR DEVICES FROM THIS NOTIFICATION PAGE. TO SEE THE NOTIFICATIONS OF A SPECIFIC DEVICE ONLY, YOU CAN GO TO: MY DEVICES >> SELECT A DEVICE >>NOTIFICATIONS BUTTON ON THAT PAGE.

Notifications	
Fence Notification	11/09/2021 16:03
Device Susan is out of fen	ce DR.'s Fence
Fence Notification	11/09/2021 14:17
Device Susan is back to fe	nce DR.'s Fence
Fence Notification	11/08/2021 12:2
Battery Low Alert from Sur	san
Fence Notification	11/04/2021 18:3
Device Susan is back to fe	nce Home
Fence Notification	11/04/2021 14:50
SOS Alert from Susan	
Fence Notification	11/04/2021 14:40
SOS Alert from Susan	
Fence Notification	11/03/2021 16:31
Device Susan is out of fer	ice Park Fence
Fence Notification	11/03/2021 16:0
Device Susan is back to fe	nce Park Fence
Fence Notification	11/02/2021 14:50
Device Susan is out of fend	e Home

# Settings

# **MY DEVICES**

FROM YOUR MOBILE APP HOME SCREEN, TAP ON "MY DEVICES" TO SEE LIST OF DEVICES, IF YOU HAVE MULTIPLE DEVICES. CLICK ON THE DEVICE TO GO TO THE

"DEVICE DETAILS".

From My Devices page you will see

- Device Name (The name can be changed from Device Details)
- Battery level
- Device SIM card and IMEI #
- · Last seen date/time.

Click on a device to go to "Device Details" to setup and update the device information at anytime.

#### \*Device status Types

- Online: This is when Device status indicates its online and connected to the App.
- Offline: This is when the device is switched off or no network signal is detected.



Click "My Devices" to see your device list



# Settings

## **DEVICE DETAILS**

FROM YOUR MOBILE APP HOME SCREEN, TAP ON
"MY DEVICES" THEN CLICK ON THE DESIRED DEVICE TO
ACCESS AND TO GO TO ITS "DEVICE DETAILS".
NOTIFICATIONS | HISTORY | SETTINGS WILL BE EXPLAINED
ON THE FOLLOWING PAGES ON THIS CHAPTER

### DEVICE NAME:


ENTER THE DEVICE NAME TO EASILY IDENTIFY THE DEVICE WHEN YOU SEE IT ON THE MOBILE APP MAP OR WHEN RECEIVING NOTIFICATIONS/ALERTS FROM THAT DEVICE.

#### GEO FENCES:

SELECT THE DESIRED GEO-FENCE (SUCH AS HOME, DOCTOR'S OFFICE, PARK, SCHOOL,... ETC.) TO RECEIVE ALERTS WHEN THE DEVICE ENTERS OR LEAVES THESE AREAS.

#### TRACKING INTERVAL:

SET UP LOCATION UPLOAD INTERVALS. THIS IS HOW OFTEN DO YOU WISH THE DEVICE TO REPORT THE LOCATION. WE SUGGEST TO SETUP TO 12 HOURS TO ENHANCE BATTERY-SAVING MODE: THIS WILL ENSURE THE DEVICE HAS SUFFICIENT BATTERY POWER FOR ANY POTENTIAL SOS ALERTS.

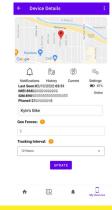



MAKE SURE TO SCROLL DOWN AND SAVE THE CHANGES BY CLICKING ON THE "UPDATE" BUTTON



## **GEO-FENCE**

GEO FENCING, ALSO KNOWN AS "SAFE ZONES," CAN BE SET UP FROM THE MOBILE APP; YOU CAN ADD, EDIT OR REMOVE A GEO-FENCE AREA. ONCE A GEO FENCE IS CREATED YOU CAN SELECT THE FENCE(S), FROM DEVICE DETAILS PAGE, TO RECEIVE ALERTS WHEN ENTERING OR EXITING A GEO-FENCE AREA.

### ADD GEO FENCE:

- CLICK ON NEW FENCE BUTTON FIRST THEN SET A PERIMETER ON THE MAP
- CLICK ON SAVE BUTTON AND ENTER THE FENCE NAME (SUCH AS HOME, DOCTOR'S OFFICE, PARK... ETC.).
  RECOMMENDED GPS RADIUS OF 1000

FEET OR HIGHER TO REDUCE FALSE ALERTS.

YOU CAN SETUP MULTIPLE GEO FENCE LOCATIONS AS NEEDED.

### **DELETE GEO FENCE:**

 TO DELETE A GEO FENCE, CLICK ON THE DESIRED FENCE FIRST, THEN CLICK ON DELETE BUTTON

CLICK TO ADD OR DELETE FENCES





# LOCATION HISTORY

THE HISTORICAL ROUTE, ALSO KNOWN AS LOCATION HISTORY, WILL DISPLAY THE HISTORICAL ROUTE OF ANY DAY WITHIN THE PAST 365 DAYS. TO HELP YOU SEE THE PRESENT AND PAST PLACES VISITED.

SELECT A DATE TO SEE THE TRACKING HISTORY.

CLICK ON ANY OF THE PINPOINTS TO VIEW THE TIMESTAMP OF THE TRACKED EVENT.



ADMIN MAIN CONTACT NUMBER

# MAIN CONTACT **NUMBER**

FROM YOUR MOBILE APP HOME SCREEN, TAP ON DEVICES SELECT YOUR DEVICE. CLICK ON "SETTINGS" THEN "MAIN CONTACT NUMBER."

### MAIN CONTACT NUMBER:

ALSO KNOWN AS THE ADMIN NUMBER THE PERSON'S PHONE NUMBER CARING FOR THE LOVED ONE'S/ASSET YOUR DESIRE TO TRACK: THIS NUMBER WILL RECEIVE APP ALERTS.

	← Settings	
	Kyle's Bike Main Contact Number:	
	2mminum	
	SOS SMS Alert Low Battery SMS Alert SOS Phone#:	
	6000000000	
2	2	
	SOS E-Mail:	













MAKE SURE TO SAVE THE CHANGES BY CLICKING ON THE "UPDATE" BUTTON



FROM YOUR MOBILE APP HOME SCREEN. TAP ON DEVICES SELECT YOUR DEVICE, CLICK ON "SETTINGS". YOU WILL SEE THE T ENABLED/DISABLE SMS ALERT OPTIONS.

MAIN CONTACT NUMBER CAN BE SET HERE

ENABLE THE SWITCHE(S) TO SET THE DEVICE TO SEND SMS ALERTS TO THE MAIN CONTACT (MONITORING/ADMIN) NUMBER.







MAKE SURE TO SAVE THE CHANGES BY CLICKING ON THE "UPDATE" BUTTON



# **SET SOS NUMBER**

FROM YOUR MOBILE APP HOME SCREEN, TAP ON DEVICES SELECT YOUR DEVICE, CLICK ON "SETTINGS" THEN "SOS PHONE #"

### SET SOS PHONE NUMBER:

LIST OF THE PHONE NUMBER(S) TO RECEIVE NOTIFICATION SMS WHEN THE SOS BUTTON IS TRIGGERED. YOU CAN SET UP-TO 3 PHONE NUMBERS.

### SOS E-MAIL:

SET THE EMAIL TO RECEIVE THE SOS ALERTS WHEN TRIGGERED.









MAKE SURE TO SAVE THE CHANGES BY CLICKING ON THE "UPDATE"
BUTTON





**CONTACT US** 



WWW.SUPPORT.SECULIFE.US



WATCH VIDEOS WWW.SECULIFE.US

### SAFETY INFORMATION

TO PREVENT INJURY TO YOURSELF AND OTHERS, OR TO AVOID DAMAGE TO THE DEVICE. FIRST READ ALL SAFETY INFORMATION BEFORE USE.

### WARNING

- USE MANUFACTURER-APPROVED ACCESSORIES AND SUPPLIES.
- · CAUTION ELECTRICAL OPERATED PRODUCT
- THIS PRODUCT IS NOT A TOY. KEEP
  OUT OF REACH OF CHILDREN AND
  PETS UNLESS PROPERLY SUPERVISED.
  THE PRODUCT CONTAINS SMALL
  PARTS THAT CAN BE A CHOKING
  HAZADD
- DO NOT DROP OR CAUSE AN IMPACT TO THE DEVICE.
- PREVENT THE CHARGING JACK AND CORD FROM COMING INTO CONTACT WITH CONDUCTIVE MATERIALS SUCH AS LIQUIDS, DUST, METALS, PENCIL LEAD. OR AEROSOLS.
- DO NOT STORE YOUR DEVICE IN EXTREMELY HOT OR IN EXTREMELY COLD AREA. RECOMMENDED TO USE YOUR DEVICE FROM 41F TO 95F
- DO NOT STORE YOUR DEVICE NEAR OR ON TOP OF HEATERS,
- MICROWAVES, HOT COOKING EQUIPMENT, OR HIGH-PRESSURE CONTAINERS
- DO NOT USE YOUR DEVICE WHILE CHARGING OR TOUCH WITH WET HANDS.
- THE DEVICE AND USB CABLE SHOULD BE PERIODICALLY EXAMINED FOR BREAKS, CRACKS, OR FRAYING, WHICH COULD RISK FIRE, ELECTRICAL SHOCK, OR PERSONAL INJURY. IF

DAMAGED, THE USB CABLE SHOULD BE REPLACED OR REPAIRED BEFORE

· KEEP OUT OF REACH OF CHILDREN AND PETS; SMALL PARTS ARE A CHOKING HAZARD.

### CAUTION

- DO NOT DISASSEMBLE, MODIFY, OR REPAIR THE UNIT.
- ANY CHANGES OR MODIFICATIONS TO YOUR DEVICE CAN VOID YOUR MANUFACTURER'S WARRANTY. IF
- YOUR DEVICE NEEDS SERVICING, CONTACT CUSTOMER SUPPORT.
- DO NOT DISASSEMBLE OR
  PUNCTURE THE BATTERY, AS THIS
- CAN CAUSE EXPLOSION OR FIRE.

  DO NOT PAINT OR PUT STICKERS ON YOUR DEVICE. PAINT AND STICKERS
- CAN CLOG MOVING PARTS AND PREVENT PROPER OPERATION.

   IF YOU ARE ALLERGIC TO PARTS OF THE DEVICE, YOU MAY EXPERIENCE ITCHING, ECZEMA, OR SWELLING OF THE SKIN WHEN THIS HADPENS.
- STOP USING THE DEVICE AND CONSULT YOUR PHYSICIAN.
- · ALLOWING UNQUALIFIED PERSONNEL TO SERVICE YOUR DEVICE MAY RESULT IN DAMAGE AND WILL VOID YOUR

AND WILL VOID YOUR MANUFACTURER'S WARRANTY.

